


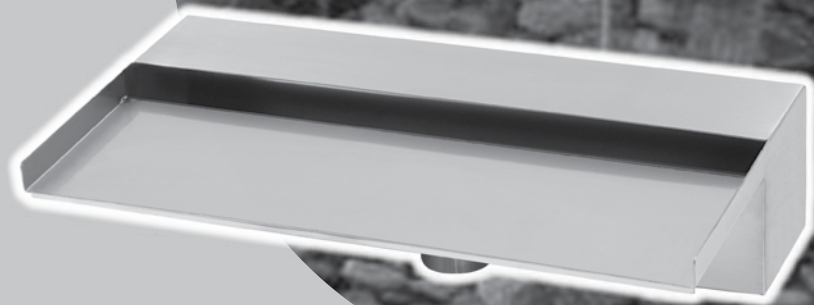

# STAINLESS STEEL WATERWALL SPILLWAY

**Stainless Steel WaterWall Spillway**  
Item #58066



## Instructions

### STEP 1

---

- Connect all plumbing (Ex. 1).

### STEP 2

---

- Position the WaterWall Spillway over a compatible water basin/reservoir (not included) and level (Ex. 2).

### STEP 3


---

- Connect the plumbing to a compatible water pump (not included)(Ex. 3). The spillway is compatible with flow rates up to 2,000 gallons per hour.

### STEP 4

---

- Plug in the pump (not included), adjust the flow, and enjoy (Ex. 4).

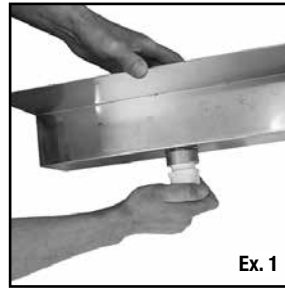

For more information about our company or products, please visit our website at [aquascapeinc.com](http://aquascapeinc.com) or call us at US (866) 877-6637 or CAN (866) 766-3426