





PRO AIR 20 COMPRESSOR RENEW KIT

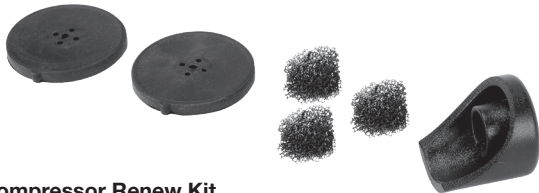

Pro Air 20 Compressor Renew Kit
Item #61015


Contents	
No.	Description
1.	Diaphragm x 2
2.	Filter Sponge x 3
3.	Filter Cap

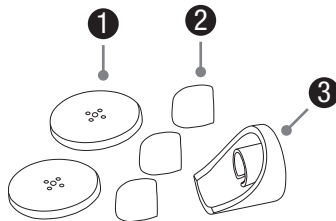


Instructions

REPLACING THE DIAPHRAGM(S)


- Remove the four screws from the bottom of the compressor, then remove the top section of the compressor (Ex. 1).

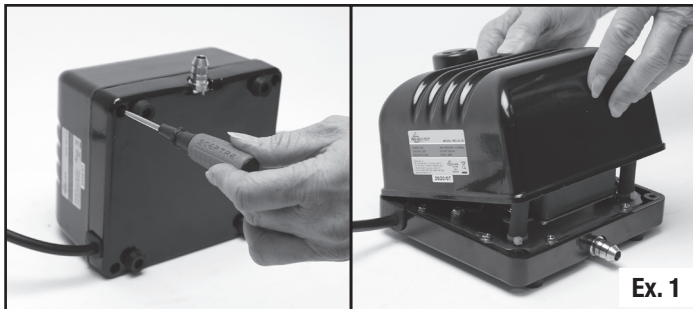

- Remove the four screws from the diaphragm cover and detach by pulling gently (Ex. 2).

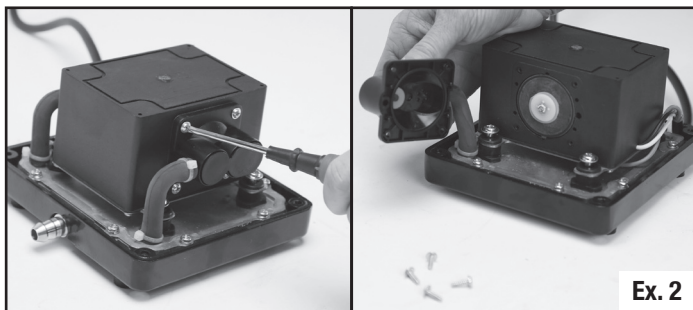


- Remove the nut at the center of the diaphragm (Ex. 3).

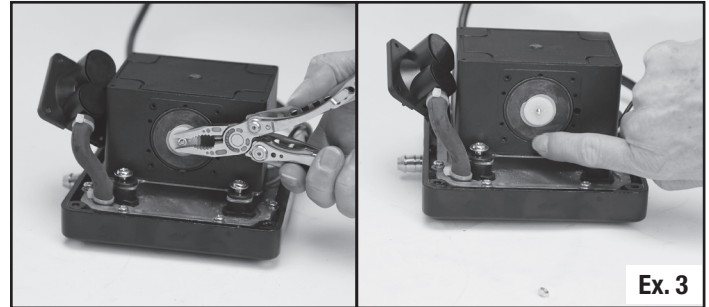


- Remove the plastic disc and thin plastic washer (Ex. 4).

NOTE: Do not lose these components. Set aside for re-installation.

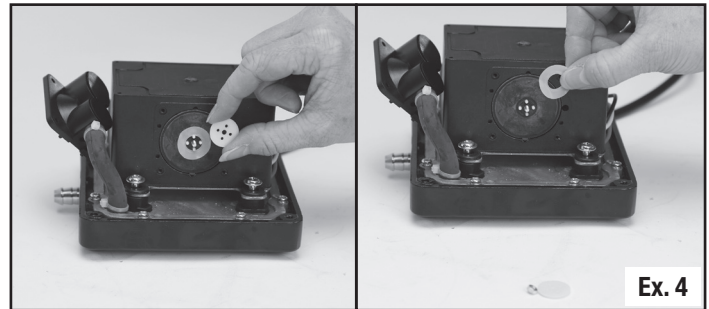

- Remove the old diaphragm (Ex. 5).

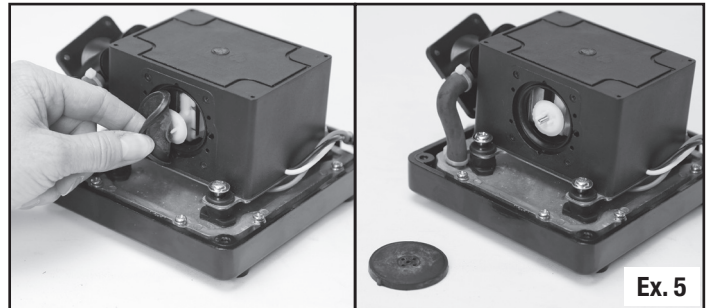

- Install the new diaphragm by reversing the process. Repeat for both sides if needed.

REPLACING THE FILTER SPONGE


NOTE: The inlet air filter is located at the top of the compressor and should be checked annually or if the compressor makes any abnormal noises. If operating the unit in dusty conditions, check more frequently.

- Replace the filter sponge as needed to ensure maximum functionality.
- To inspect or replace the filter sponge, pull on the filter cover to remove (Ex. 6).






KIT DE RENOUELEMENT DU COMPRESSEUR PRO AIR 20

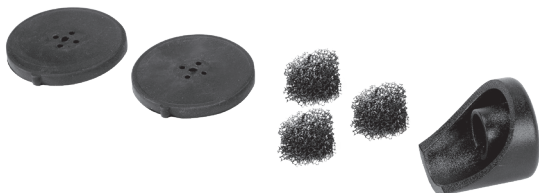

Kit de renouvellement du compresseur Pro Air 20
Référence #61015


Contenu	
N°	Description
1.	Diaphragme x 2
2.	Éponge filtrante x 3
3.	Bouchon de filtre

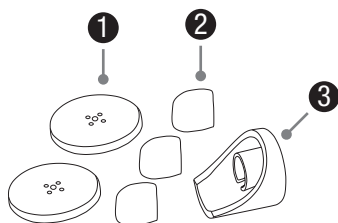


Instructions

REPLACEMENT DU (DES) DIAPHRAGME (S)


- Retirez les quatre vis du bas du compresseur, puis retirez la partie supérieure du compresseur (Ex. 1).

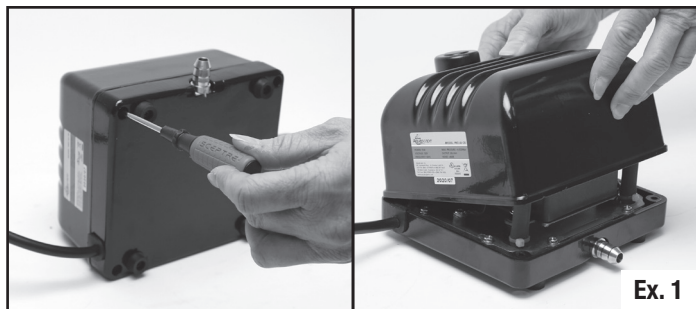

- Retirez les quatre vis du couvercle du diaphragme et détachez-les en tirant doucement (Ex. 2).

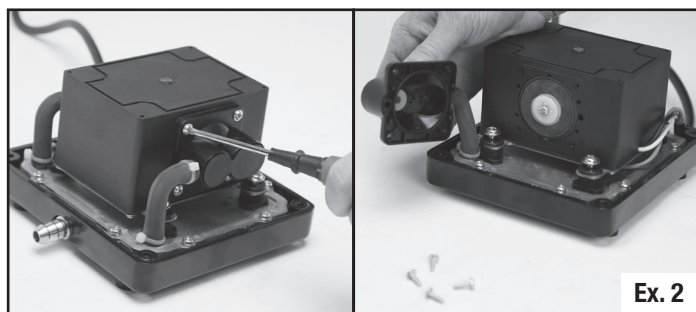


- Retirez l'écrou au centre du diaphragme (Ex. 3).

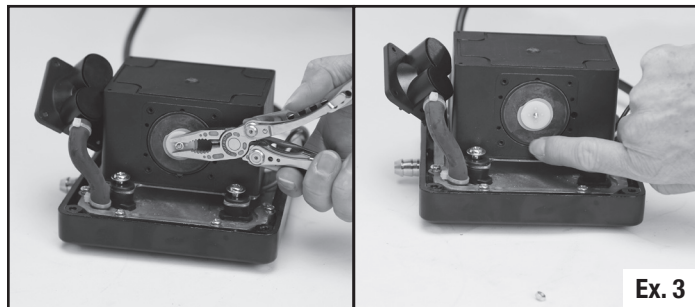


- Retirez le disque en plastique et la fine rondelle en plastique (Ex. 4).

REMARQUE : Ne perdez pas ces composants. Mettre de côté pour la réinstallation.

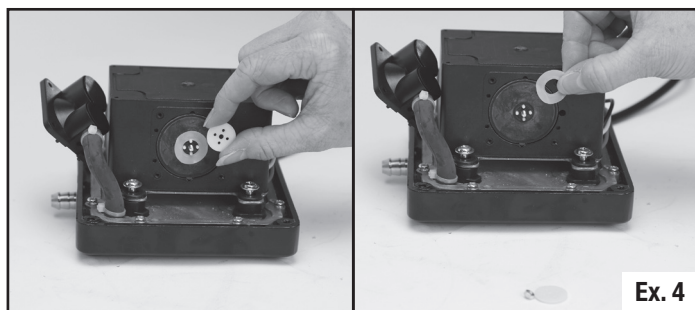

- Retirez l'ancien diaphragme (Ex. 5).

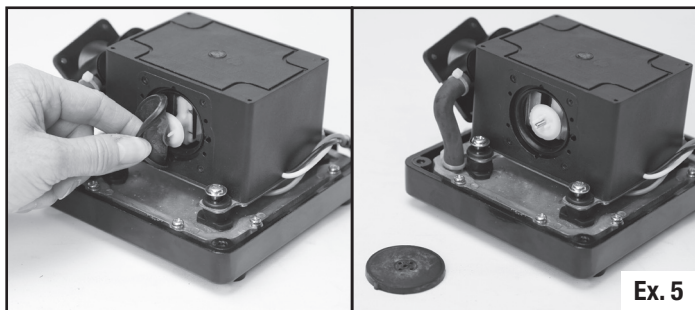

- Installez le nouveau diaphragme en inversant le processus. Répétez pour les deux côtés si nécessaire.

REPLACEMENT DE L'ÉPONGE FILTRANTE

REMARQUE : Le filtre à air d'admission est situé en haut du compresseur et doit être vérifié tous les ans ou si le compresseur fait des bruits anormaux. Si vous utilisez l'appareil dans des conditions poussiéreuses, vérifiez plus fréquemment.

- Remplacez l'éponge de filtre au besoin pour assurer une fonctionnalité maximale.
- Pour inspecter ou remplacer l'éponge du filtre, tirez sur le couvercle du filtre pour le retirer (Ex. 6).

